



Case IH 1200 Series Planter

Disk Opener & Gauge Wheel

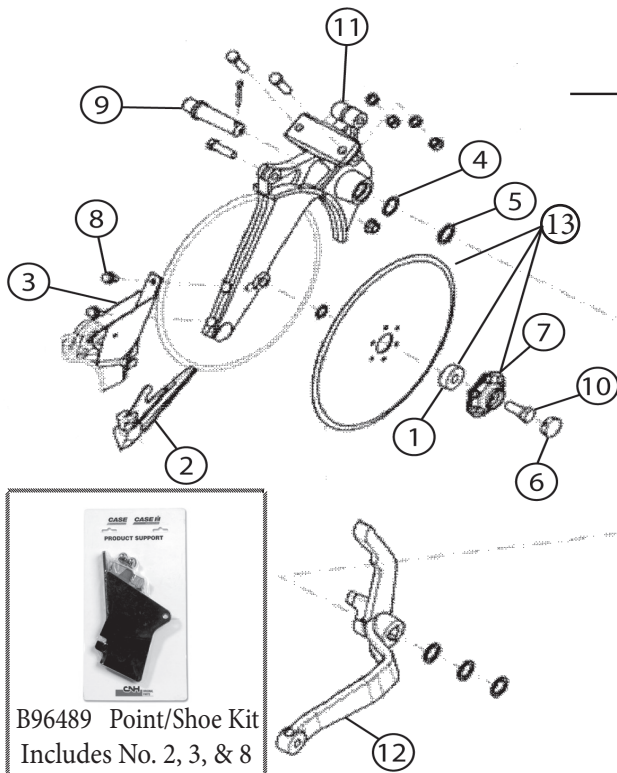

- | | | |
|-----|-----------|---|
| 1 | 87668158 | Ball Bearing 1.78 x .73 x .62 id |
| 2 | 436702A1 | Shovel Cast Furrow Point, Complete |
| 3 | 84195113 | Shoe Assembly |
| 4 | 86624173 | Washer 1 $\frac{3}{32}$ " x 1 $\frac{1}{2}$ " x .060" |
| 5 | 86624174 | Washer 1 $\frac{3}{32}$ " x 1 $\frac{1}{2}$ " x .120" |
| 6 | 324180A1 | Cap Bearing |
| 7 | 90409C1 | Flange |
| 8 | 1263977C1 | Bolt 1k $\frac{3}{8}$ "-16 x $\frac{3}{4}$ ", G8 w/ Chemical Lock |
| 9 | 175598A1 | Pin Flanged 1" od hardened w/ 1"-12 threaded end |
| 10 | 88685 | Bolt Hex, $\frac{5}{8}$ "-11 x 1 $\frac{1}{2}$ ", G8, Full Thd |
| 11a | 436709A1 | Support Cast Disc RH |
| 11b | 436708A1 | Support Cast Disc LH |
| 12a | 86983485 | Arm Cast Gauge Wheel RH |
| 12b | 86983484 | Arm Cast Gauge Wheel LH |
| 13 | | Disk Assembly - Call for Options |

Seed Meter Assembly

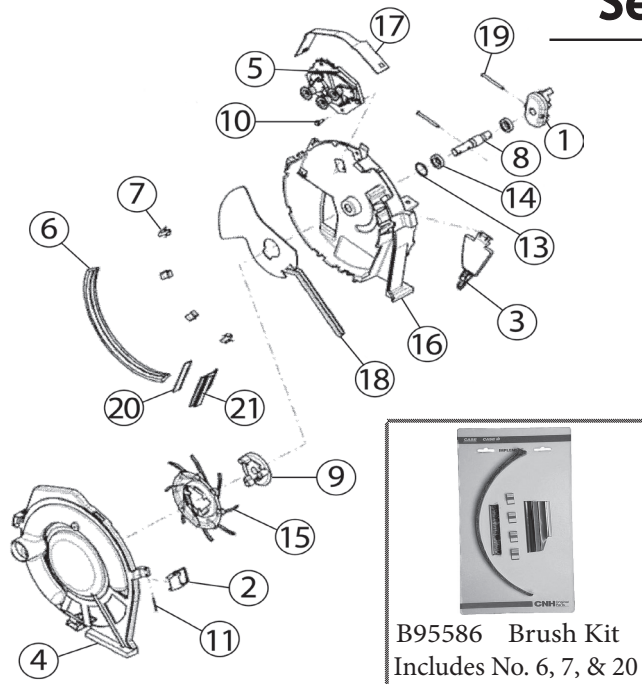

- | | | |
|----|-----------|---|
| 1 | 308400A4 | Drive Assembly, Meter |
| 2 | 256370A1 | Latch and Bail Assembly |
| 3 | 432340A1 | Door Assembly Includes Seed Latch |
| 4 | 302238A1 | Cover Latch Assembly |
| 5 | 413842A1 | Housing Singulator |
| 6 | 296776A1 | Brush Annulus |
| 7 | 296777A1 | Clip Annulus Brush |
| 8 | 401419A1 | Gear Shaft ASM Meter Drive |
| 9 | 326923A1 | Rotor Disc |
| 10 | 281-14510 | Self-Tap Screw Hex Wash HD, #10 x $\frac{5}{8}$ " |
| 11 | 256373A1 | Pin Latch |
| 13 | 301644 | Circlip M30 |
| 14 | 401425A1 | Bearing Assembly |
| 15 | 326924A2 | Agitator Assembly |
| 16 | 87445992 | Housing Seed Meter |
| 17 | 300089A1 | Screen Seed Meter |
| 18 | 294837A1 | Baffle Seed Shut Off |
| 19 | 87502422 | Lock Pin Cotterless Self-Locking |
| 20 | 296783A1 | Brush Straight |
| 21 | 294924A1 | Clip Straight Brush |