
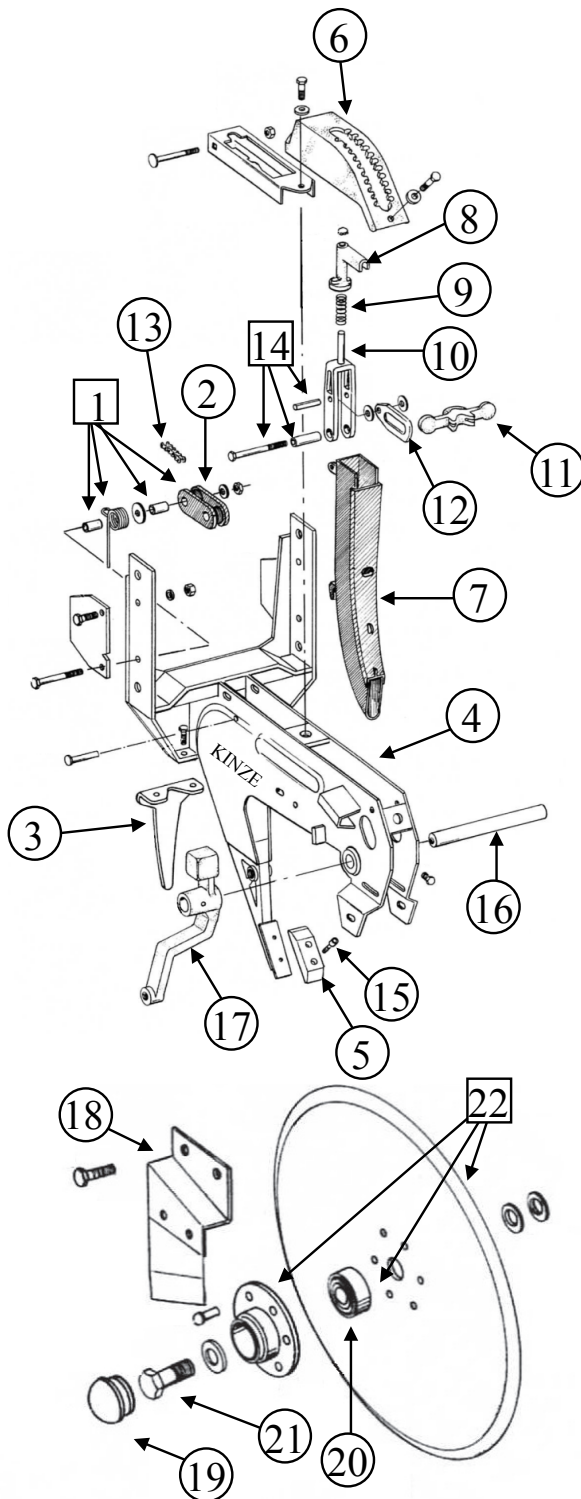


KINZE 3000 Series Planter

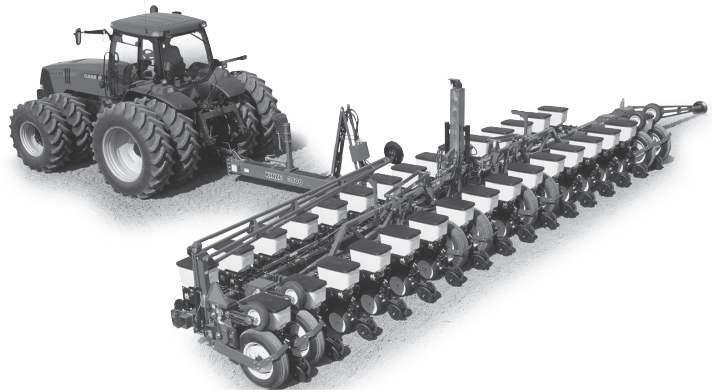

1	G1K212	Idler Kit
2	GD11962	Idler
3	GD1033	Shield
4a	GA10157	Shank 2006 - Current
4b	GA8600	Shank Prior - 2005
5	GB0301	Guard/Inner Scraper
6	GB0274	Cover, Depth Adjuster
7	GD1130	Tube, Blank
7a	GR1461	Tube, with hole
7b	GA9847	Tube with sensor
7c	GR1629	Sensor only
8	GB0266	Handle
9	GD10993	Spring
10	GB0267	Lever
11	GB0265	Pivot Link
12	GB0285	Collar
13	G3303-98	Meter Drive Chain
14	G1K346X	Depth Kit
15	G10912	Socket Screw
16	GD11001	Spindle
17a	GA7975	L.H. Gauge Whl. Arm
17b	GA7976	R.H. Gauge Whl. Arm
18a	GA2012R	Disc Scraper, Right
18b	GA2012L	Disc Scraper, Left
19	GD11845	Dust Cap
20	GA2014	Bearing
21	GD11017	L.H. Thread Bolt
22	GA8324	H.D. Disc Assembly

Service Notes

- Replace opener blades when worn below 14½"
- Shim H.D. opener blades to 1" - 1½" Blade Contact
- Replace seed tube guard with opener blades
- Check for wear on scrapers
- Check for damaged seed tubes

